1/8 AUS920030917US1



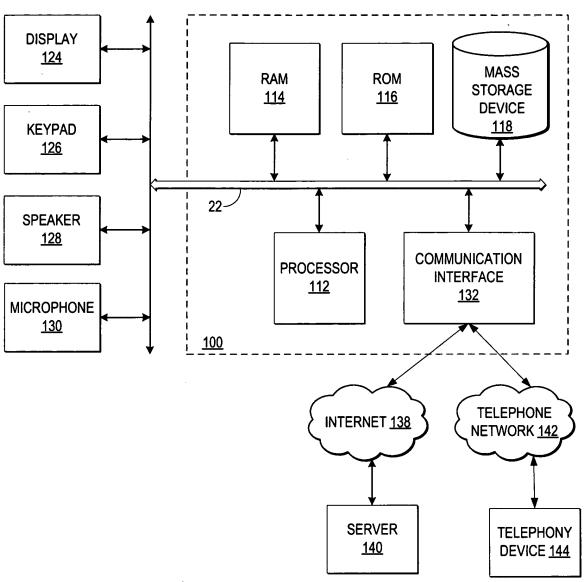


Fig. 1

2/8 AUS920030917US1

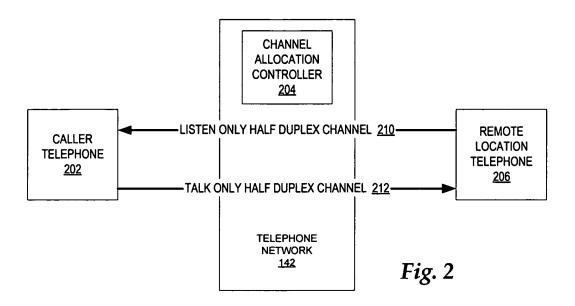

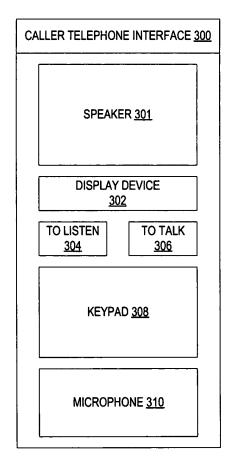

SPEAKER 401

DISPLAY DEVICE 402

LISTEN INDICATOR 404

KEYPAD 408

MICROPHONE 410

Fig. 3

Fig. 4

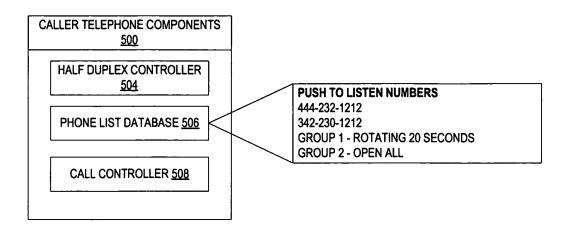


Fig. 5

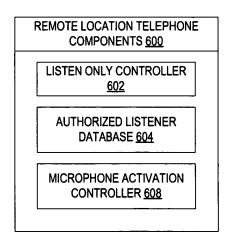


Fig. 6

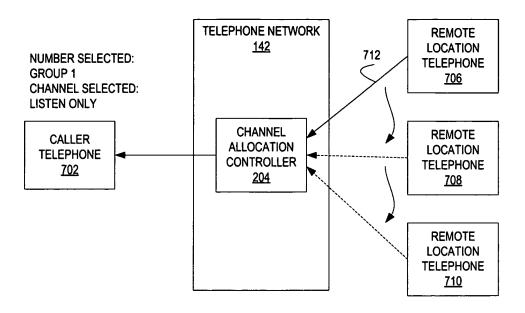


Fig. 7

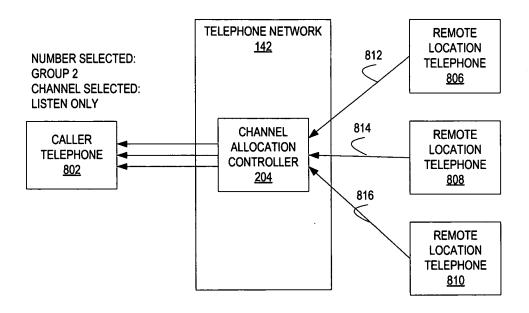


Fig. 8

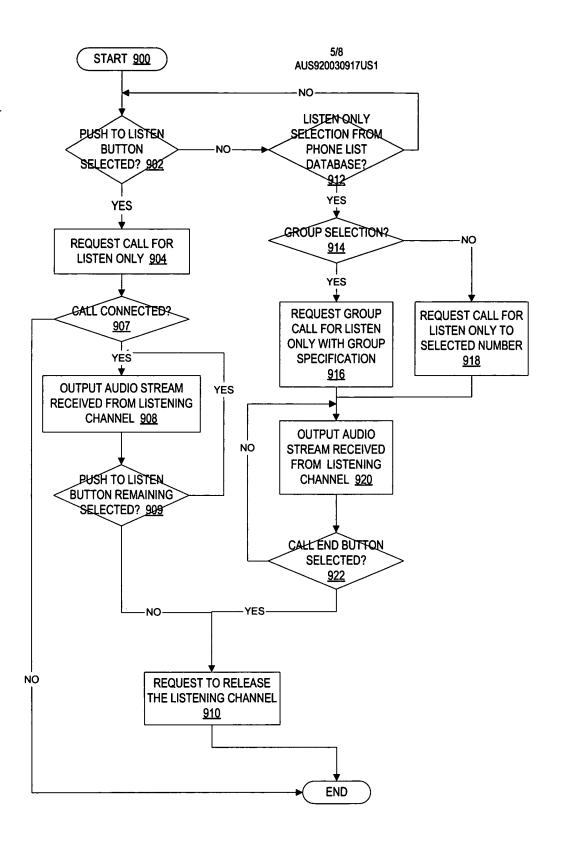


Fig. 9

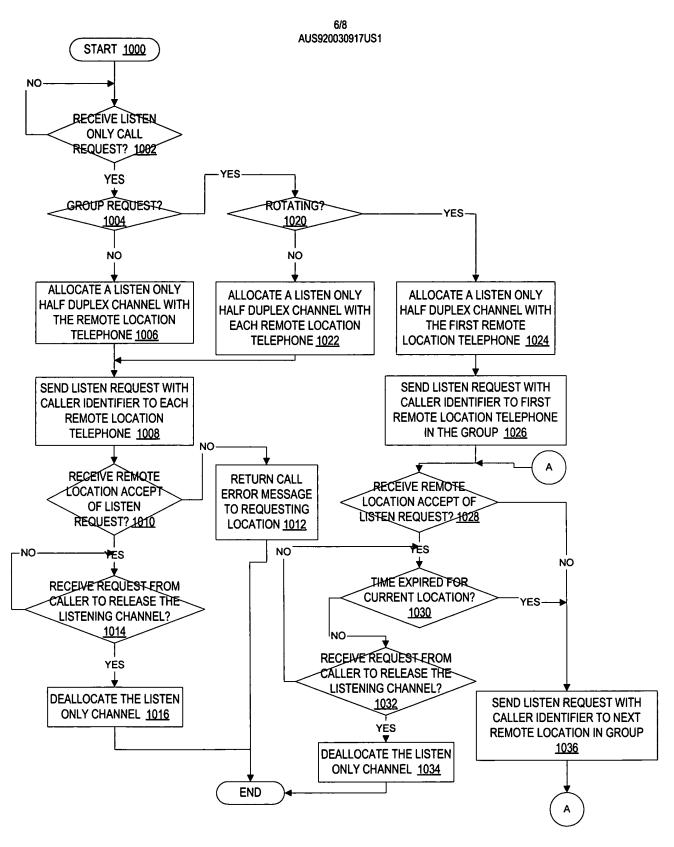


Fig. 10

7/8 AUS920030917US1

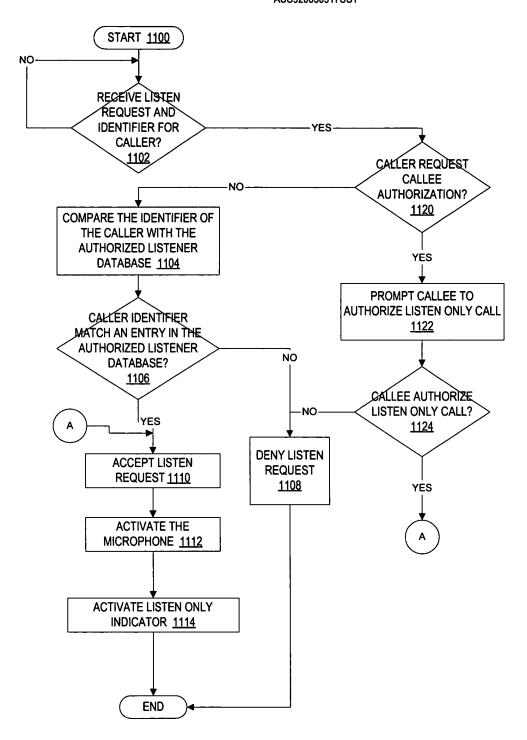


Fig. 11

